

## Power Steering Column Adjustment

From January 2011




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

erWan

# Steering Column Electronics Control Module


- J527 Steering Column Electronics Control Module
- ST1 Fuse Panel 1
- ST2 Fuse Panel 2
- SC6 Fuse 6 (On Fuse Panel C)
- SC7 Fuse 7 (On Fuse Panel C)
- SB13 Fuse 13 (On Fuse Panel B)
- T16e 16-Pin Connector
- T17f 17-Pin Connector
- T46a 46-Pin Connector
- TV33 Powertrain CAN Bus High Wire Junction
- TV37 Powertrain CAN Bus Low Wire Junction

- 45 Ground Connection Behind Instrument Panel, Center
- 199 Ground Connection 3 (in Instrument Panel Wiring Harness)
- A204 Instrument Cluster CAN Bus High Connection (in Instrument Panel Wiring Harness)
- A205 Instrument Cluster CAN Bus Low Connection (in Instrument Panel Wiring Harness)
- \* Refer to Applicable Wiring Diagram for Fuse Positions
- \*2 Refer to Applicable Wiring Diagram for Data Bus Networking
- \*3 For Vehicles with Heated Steering Wheel
- \*4 Data Bus Wire (CAN Bus)
- \*5 From June 2014

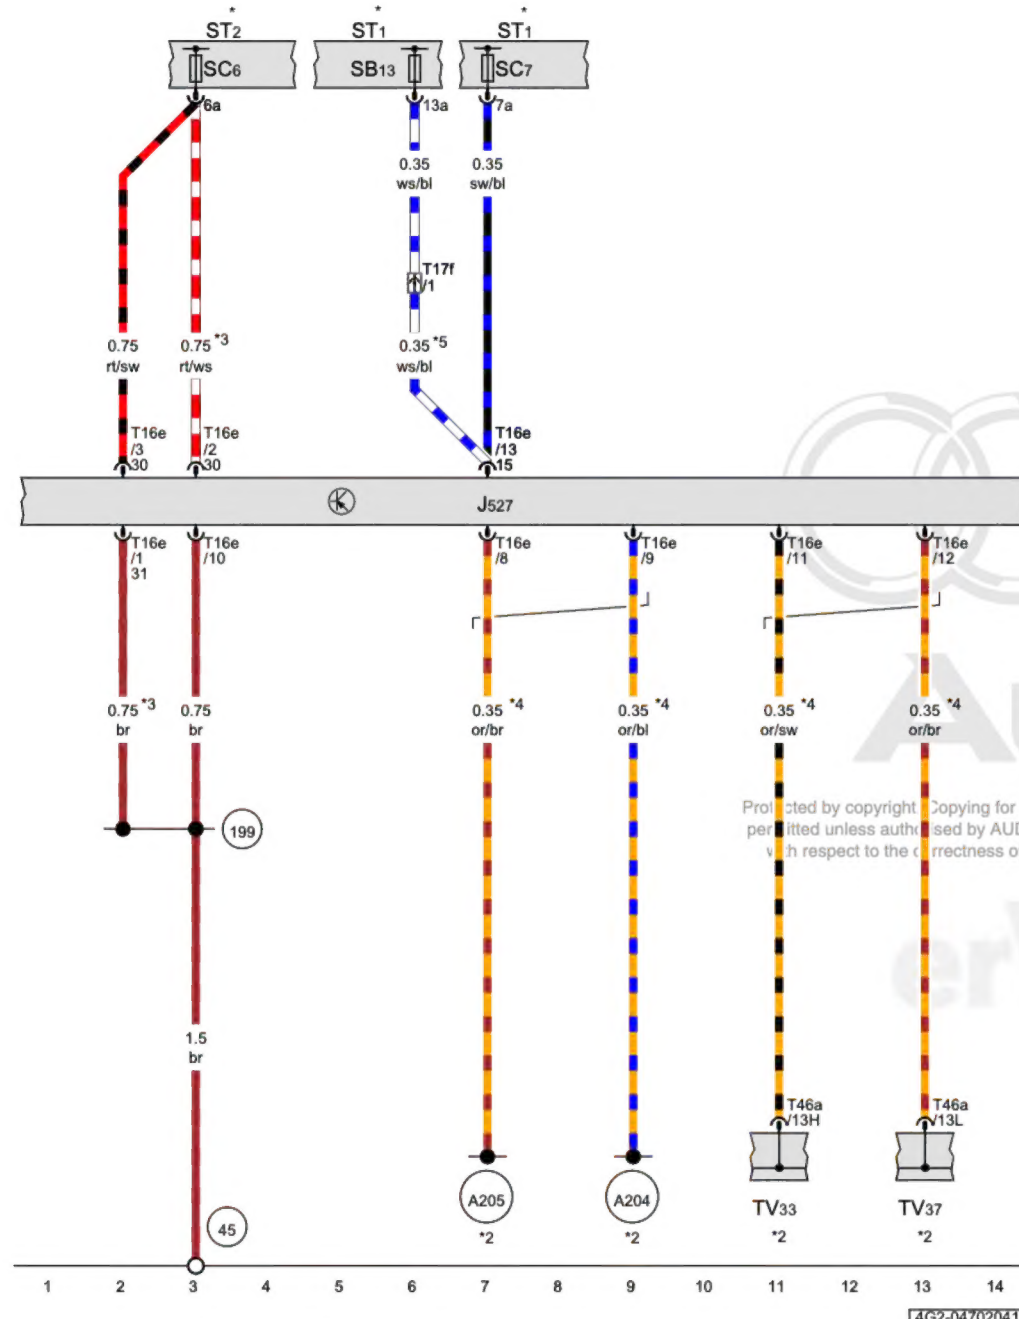

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Steering Column Adjustment Switch, Vehicle Electrical System Control Module, Power Adjustable Steering Column Control Module

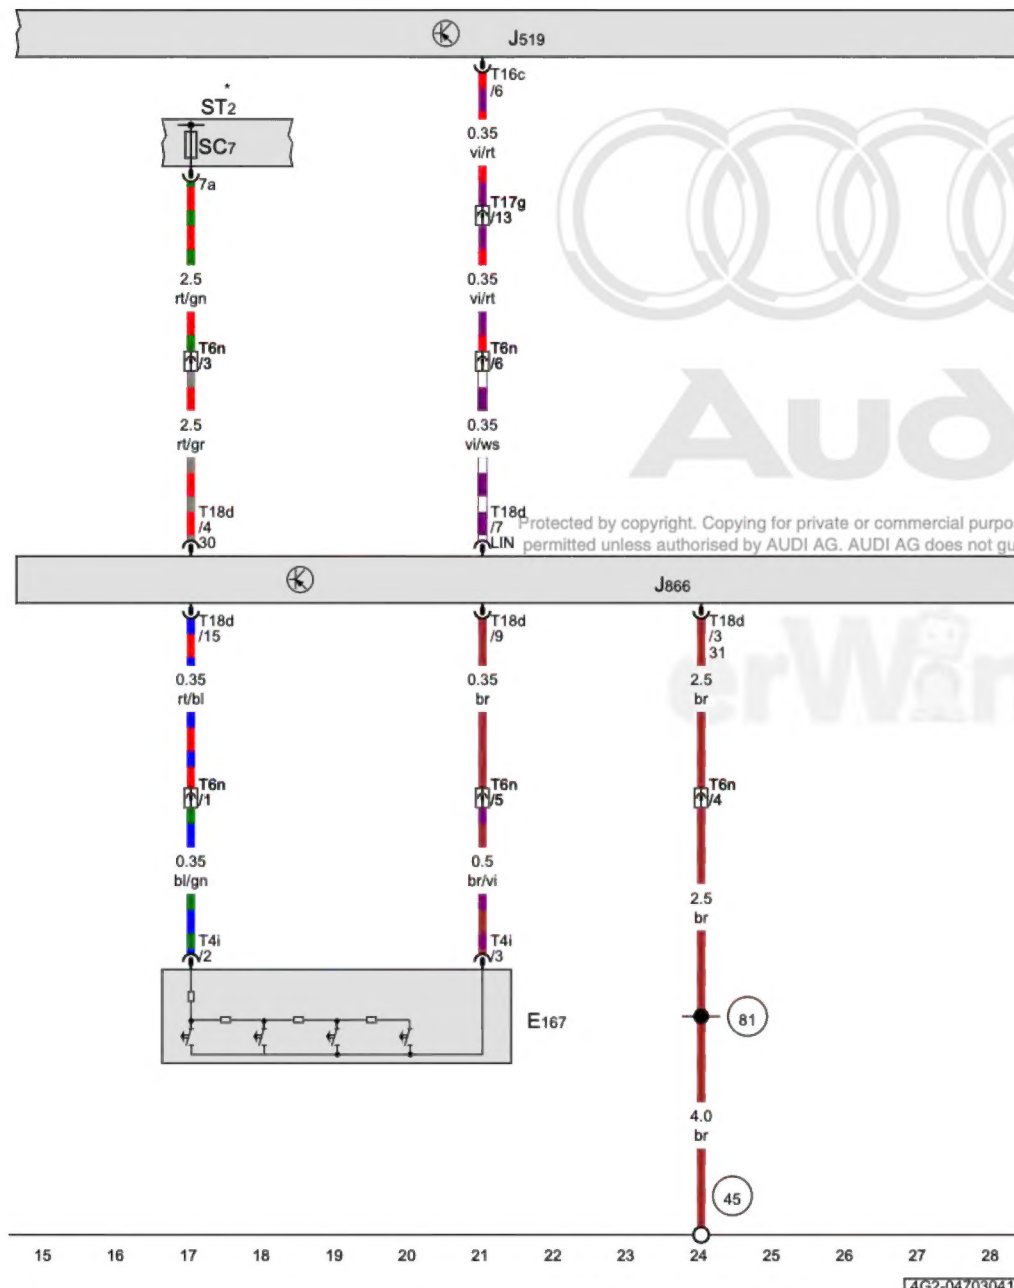

- E167 Steering Column Adjustment Switch
- J519 Vehicle Electrical System Control Module
- J866 Power Adjustable Steering Column Control Module
- ST2 Fuse Panel 2
- SC7 Fuse 7 (On Fuse Panel C)
- T4i 4-Pin Connector
- T6n 6-Pin Connector, Behind the Steering Column Trim Panel
- T16c 16-Pin Connector
- T17g 17-Pin Connector
- T18d 18-Pin Connector

- 45 Ground Connection Behind Instrument Panel, Center
- 81 Ground Connection 1 (in Instrument Panel Wiring Harness)
- \* Refer to Applicable Wiring Diagram for Fuse Positions

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Steering Column Vertical Adjustment Sensor, Steering Column Axial Adjustment Sensor, Power Adjustable Steering Column Control Module, Steering Column Vertical Adjustment Motor, Steering Column Forward/Back Adjustment Motor

- G357 Steering Column Vertical Adjustment Sensor
- G358 Steering Column Axial Adjustment Sensor
- J866 Power Adjustable Steering Column Control Module
- T4da 4-Pin Connector
- T4db 4-Pin Connector
- T18d 18-Pin Connector
- V123 Steering Column Vertical Adjustment Motor
- V124 Steering Column Forward/Back Adjustment Motor
- B730 Connection (in Steering Column Adjustment Wiring Harness)

